

MATERIALS:

- (2) 3/4" Side Poles
- (2) 5/8" Top/Bottom Poles
- (2) 1/2" Horizontal Tension Poles
- (1) 1/2" Vertical Tension Pole
- (1) Hole Finder Tool
- (1) Pocketed Cloth Carry-on Banner

1 STEP ONE

Lay banner face down on a clean surface and unfold all poles.

Slide the side poles into the side pockets on the banner. The notched end goes at the top. Slide the top and bottom poles into the top and bottom pockets. Push the tips of the top and bottom poles into the matching holes on the side poles. (The cloth may need to be stretched some in order to put the poles in place.)

2 STEP TWO

In the event that the holes do not match up, use the hole finder to rotate the poles until they are in the correct position.

Insert one tip of the vertical tension pole into the middle hole of the top pole and the other tip into the middle hole of the bottom pole.

Repeat the process with the horizontal tension poles.

3 STEP THREE


Attach the feet to the bottom of the side poles and lift the display into the standing position. Use pins in the lowest hole on the side poles to properly secure the feet.

For lifted displays attach the extension poles to the side poles and then attach the feet.

1



2

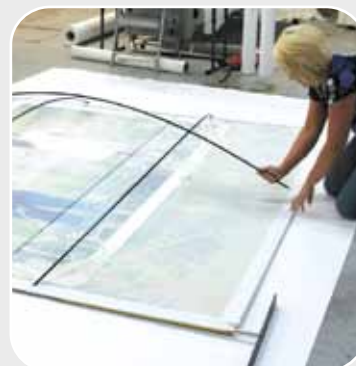

3



IMPORTANT!

- Be cautious when handling the tension poles as they can be dangerous and may result in injury if they slip out of your hands or do not get seated properly into the holes.
- Note that on smaller CarryOn Displays, there will be no horizontal tension poles or numbers overall may vary.
- After prolonged periods of storage the banner may become wrinkled. Wrinkles will come out after several hours of tension or you may use a steamer to remove them immediately. Walgreens sells an electric steamer for around \$30.